

User Manual WP200



EN Highlight Wireless Presenter

August International Ltd United Kingdom Tel: +44 (0) 845 250 0586 www.augustint.com

User Manual

Thank you for purchasing the August LP200 Highlight Wireless Presenter, This user manual is designed to familiarise you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

Safety

To ensure the safety of you and others, please read the Safety Instructions before using this device. Please do not disassemble the product, it can be unsafe and will invalidate the manufacturer's warranty.

Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country.

Always check with the environmental agency and any other relevant authorities for current disposal regulations.

Declaration of Conformity

The Declaration of Conformity can be found on our website at http://augustint.com/en/declaration/

Customer Service

You can contact us by phone on: +44 (0)845 250 0586 or by email at: service@augustint.com should you require further technical support or customer service.

1. Safety Instructions

■ Storage and Use



machine away from hot or cold places. this device is storage temperature is and ~ end



Keen the Receiver away from water or environment



Never expose the receiver to moisture.dust oil or smoke



Aumiri dropping or exposing to impacts



machine in containers that are unstable as this may cause damage.



Never extrude or chafe this machine with sharp objects

■ Maintenance

Please unplug all connection wires before cleaning this machine



Please wipe this machine and buttons with a softeinth Only clean the screen with professional LCD TV screen deanser



Never wipe this machine with an abrasive doth. determent nowrier alcohol. and benzene etc various propellants or deaning products

2. Main Features

- Laser-Free for Greater Safety: Red Dot, Spotlight and Magnifying options
- Highlight Key Points with Integrated Presentation Software
- Dedicated Shortcut Keys to Control Your Slides Wirelessly
- Long Life Integrated Rechargeable Battery
- Compatible with Windows 10 / 8 / 7 / Vista / XP

3. Box contents










Carry case USB Power Cable User

4. Part Names and Functions

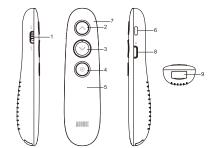

- 1. Power Switch
- 2. Up / Press and hold for Blank Screen (PowerPoint)
- 3 Down / Press and Hold to Start / End Slideshow
- 4. Multi-Function Button
- 5. LED Display
- 6. USB Charging Port
- 7. Status LED
- 8 Tab
- 9 USB Receiver

5.Operations

5.1 Windows Installation

Plug the USB receiver into a USB port on your computer. The system will automatically search for the new hardware and complete the installation.

Once installed, switch on the WP200 is ready to use.

5.2 Functions

Basic Use

Air mouse

- Press and hold **⊙** to active and use the WP200 as
- Press @ as a left click

■ Slideshow Control

- Next slide: Press 🗸
- Previous Slide: Press ^
- Blank Screen (PowerPoint): Press and hold ^
- tart / End Slideshow: Press and hold >
- Hyperlink: Press (Move the pointer over the link first)

■ Tasks Switching

 Press and hold the Tab button to switch between tasks / Windows. Point the WP200 upwards to change the task forward, point the WP200 downward to change the task backward.

Advanced Use

Please note the presentation software is required for advanced use. For more information of the software, please refer to section 5.3.

The advance use contains all basic use function with the addition of the highlight pointer mode.

Once the software is running, the air mouse will activate the selected highlight pointer mode.

- Press (•) (Multi-Function Button) twice to change between

- Press

 (Multi-Function Button) twice to change between the available highlight pointer mode: spotlight, magnifying and on-screen laser mode.
- Press and hold () to use the selected mode.
- While using one of the highlight pointer modes, press ∧ or ∨ to adjust the size of the pointer.

5.3 Presentation Software

The presentation software is integrated in the USB receiver. Some features can only be used while the software is running.

- 1. Insert the USB receiver into a USB port.
- 2. Find and open the new USB drive in 'My Computer' on Windows 7 or 'This PC' on Windows 8/10.
- 3. Launch the 'PresenterH100' application.



- 4.Switch on the WP200, the software will be enabled automatically and can be found in the system tray icons.
- Click on the software icon to see the application's page and settings.

■ Spotlight Settings

- Adjust the slide bar to increase or decrease the background brightness in spotlight mode.

Digital Laser Settings

 Adjust the colour bar to change the colour of the digital laser.

■ Pointer Speed Settings

 Adjust the slide bar to increase or decrease the speed of pointer.

■ Auto Startup

 Enables the auto run of the software as soon as the USB is plugged in in order to access all features (basic and advanced).

■ Lost Dongle Notification/Feature

 Enables an audio prompt to be announced through the computer's speakers after 22 seconds when the device is switched off to remind you to unplug the USB receiver and not forget it.

Alarm Timer

 Enables a vibrating timer on the device. Input the required time in minutes. Press the Tab button on the WP200 to display the remaining time. The Device will vibrate once the time has elapsed.

6. Charging

This device contains a built-in Lithium rechargeable battery. When then battery is low, the LED display will show L . .

To charge the device, connect the WP200 to a powered USB port by using the provided USB power cable.

While charging, the Status LED will light red. Once fully charged, the status LED will go off.

A full charge will take approximatively 1 hour.

7. Specifications

Presenter:

Technology	GFSK
Frequency	2.4 - 2.4835GHz
Control Distance	10m
Battery	200mAh Lithium Battery
Working Current	15mA
Sleep Current	20uA
Dimensions	130 x 34 x 21mm
Net Weight	43g

9. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main units, and does not cover the accessories.
- The warranty does not cover the damage caused by negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586 Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at http://www.augustint.com/en/declaration.

