

AUGUST®

User Manual

WS350



August International Ltd
Rawmec Business Park
Hoddesdon EN11 0EE
United Kingdom
T: +44(0) 845 250 0586
(Carrier Rates Apply)
E: service@augustint.com

EU Distributor:
Daffodil Germany GmbH
Bayernstr. 10
D-30855 Langenhagen
Germany
T: +49 (0) 511 97812978

www.augustint.com

- EN 30W Multiroom Wi-Fi Speaker
- FR Enceinte 30W Wi-Fi Multi pièce
- DE 30W Multiroom Wi-Fi Lautsprecher
- IT 30W Altoparlante Multiroom Wi-Fi
- ES Altavoz Wi-Fi Multiroom de 30W
- PL Głośnik Wi-Fi Multiroom 30W
- RU 30B Wi-Fi Динамик Multiroom
- AR مكبر صوت لاسلكي متصل
- CN 30W多功能Wi-Fi音箱
- JP 30WマルチルームWi-Fiスピーカー

User Manual

Thank you for purchasing the August WS350. This user manual is designed to familiarize you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

GPL

August ALink is a free and open source application. To view the GUN General Public Licence (GNU GPL or GPL), please use the link below or visit our website www.augustint.com:
<https://augustint.com/en/gpl-290.html>

Safety

To ensure the safety of you and others, please read the Safety Instructions before using this device. Please do not disassemble this product, it can be unsafe and will invalidate the manufacturer's warranty.

Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environment agency and any other relevant authorities for current disposal regulations.

Declaration of Conformity


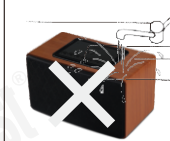 




The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

Customer Service

You can contact us by phone on: +44 (0)845 250 0586 or by email at: service@augustint.com should you require further technical support or customer service.

1. Safety Instructions

 ■ Storage and Use

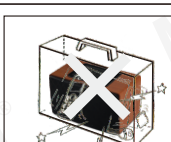	<p>Do not store or use this device in extreme temperatures.</p>		<p>Do not store or use this device in wet or damp environments.</p>
	<p>Do not expose this device to dust, oil or smoke.</p>		<p>Do not drop or strike this device.</p>
	<p>When transporting this device, store securely to avoid impact damage.</p>		<p>Do not scratch this device with sharp objects.</p>

■ Maintenance

Please unplug all leads before cleaning this device.

	<p>Wipe the device and buttons with a soft cloth.</p>		<p>Never wipe this device with an abrasive cloth or apply detergent, alcohol or chemical based cleaning products.</p>
---	---	--	---

2. Main Features

- Multiroom Wi-Fi Speaker for Android and Apple Devices
- Ethernet and Wireless Connection
- Bluetooth Connectivity for Non Wi-Fi Devices
- Audio-In Socket for Non Wireless Devices
- Long Life Built-in Rechargeable Battery

3. Box Contents



WS350



USB Power Cable



3.5mm Audio Cable



Aerial



 
Quick Start Guide




Safety and Warranty

4. Part Names and Functions

4.1 Top

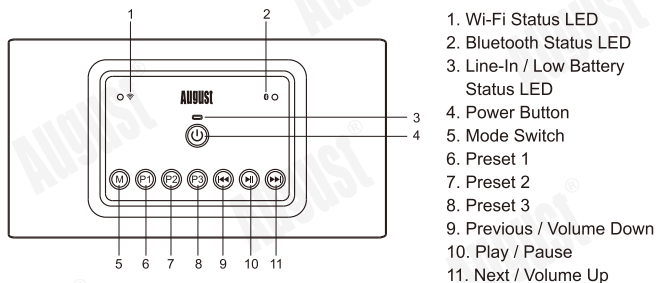

 4.2 Back

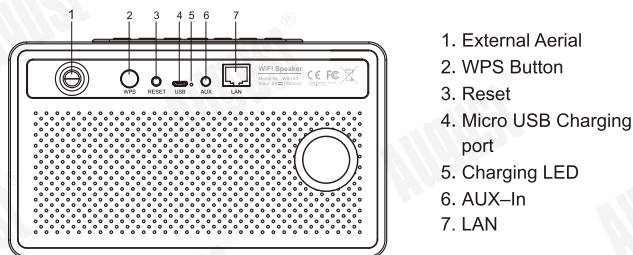

4.3 Status LED Meaning

	Status	Indication
Wi-Fi Status LED	Flashing Green	Entering Wi-Fi Mode
	Green	Wi-Fi Mode
Bluetooth Status LED	Flashing Blue	Bluetooth Pairing Mode
	Blue	Bluetooth Connected
Line-In / Low Battery Status LED	Flashing Red	Low Battery
	Red	Line-In Mode

5. Operation

5.1 Installation

1. Scan the QR code below with your device or search for 'Legacy Player' to download and install the app from the Google Play or the App Store.



2. Enable the Wi-Fi on our device and connect to your network.
3. Turn on the speaker, after 20 seconds it will enter Wi-Fi mode. will flash for 15 seconds when entering Wi-Fi mode. Once in Wi-Fi mode, will light green.

Tip: Once in Wi-Fi mode, you can connect the speaker to your Wi-Fi directly from your router, without passing through the application. Press **WPS** on the speaker then press the bold button on your router. They will establish the connection on their own.

5.2 Connection

 
5.2.1 Wi-Fi Connection (Using the WPS function)

1. Turn on the WS350.
2. Ensure the WS350 is in Wi-Fi mode. The status LED will light green in Wi-Fi mode.
3. Press the WPS button on the WS350.
4. Press the WPS button on the router.
5. The WS350 should connect to the router after about 10 seconds.



Once set up, the WS350's network will be encrypted and the password of the WS350 will use the same password of your home Wi-Fi.

5.2.2 Wi-Fi Connection (Using the August Alink App)

1. Run the application and press 'Add Device'.

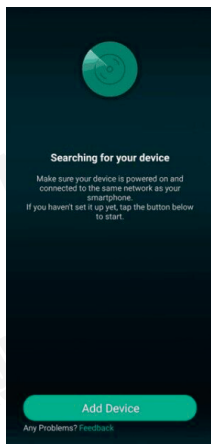


  2. Press 'Settings' and connect the mobile device to a temporary wireless network created by the speaker.

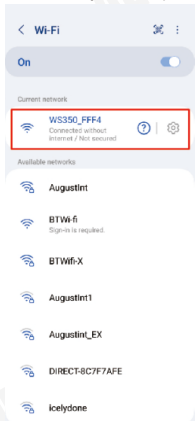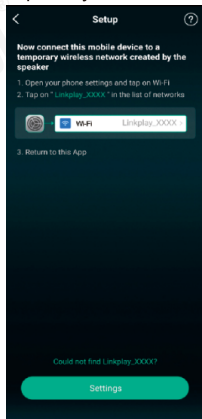


-6-

 3. Confirm you Wi-Fi network's name and enter the password, then press 'Continue'.

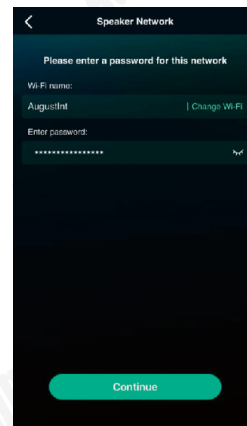


 4. The application will set up the Wi-Fi connection for the Speaker.

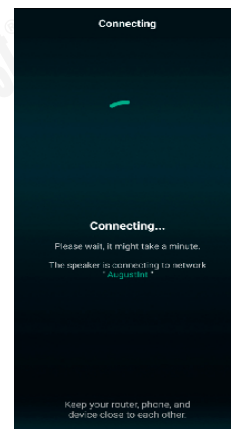


-7-

 5. Once connected, press 'Next' to finish.

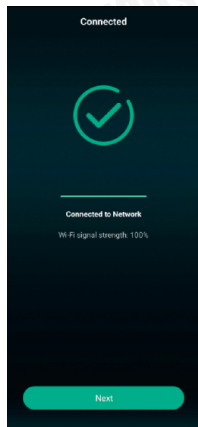

 
6. To add another device, press '+' on the 'Device List' page and repeat steps 2-4.

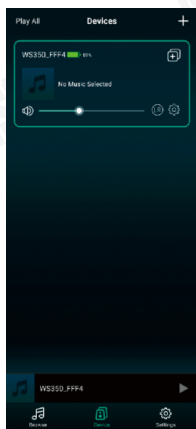




5.2.3 Direct Connection

You can also connect your phone / tablet directly to the WS350's Wi-Fi network.

1. Turn on the WS350.
2. Enter the Wi-Fi settings of your device and connect to the WS350's Wi-Fi network. The Wi-Fi network's name is 'WS350_XXXX'.
3. If the WS350 has not connected to a home Wi-Fi before, then there will be no password for its network. If the WS350 has connected to a home Wi-Fi before, the WS350's network will be encrypted and the password of the WS350 will be the same password of your home Wi-Fi.
4. Whilst the WS350 is on and in Wi-Fi mode, you can hide its Wi-Fi SSID by using the August Alink app.
 - 1). Go to 'Device list'.
 - 2). Press  to see the available options.
 - 3). Enable 'Hide SSID'.

5.2.4 Bluetooth Connection

1. Press 'Mode Switch' to change between Wi-Fi and Bluetooth mode.
2. The WS350 will enter reconnection mode and will connect automatically to any previously known device. If no known device is available, the WS350 will automatically enter pairing mode after 4 seconds and  will flash blue.
3. Enable Bluetooth on the source device.
4. Scan for Bluetooth devices on your source device. Select WS350 to connect to it. Once successfully paired,  will light blue.
5. To pair to a new device, press and hold the Play / Pause button for 3 seconds to switch the WS350 into pairing mode again.

Note: When the source device is switched off, the WS350 will enter reconnect mode.  will flash blue and you will be able to reconnect to any previous paired device.

5.2.5 Ethernet Connection

Connect the Ethernet cable from your router to the LAN socket on the WS350. Once connected, the WS350 will be added to your Wi-Fi network automatically.

 
5.2.6 AUX-IN

Use the provided audio cable to connect your source device to the WS350.

Once the audio cable is plugged in, the receiver will enter line-in mode automatically and the status LED will light red.

5.3 Multi and Solo Mode (Wi-Fi Connection Only)

The speaker's playback settings can be changed in the 'Device List'

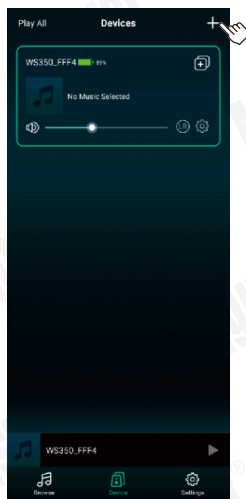

5.3.1 Solo Mode

Solo mode enables multiple speakers connected to the same network to play different music individually. Speakers by default are in solo mode.


5.3.2 Multi Mode

Multi mode enables you to group some or all speakers connected on the same network to play the same music. This can be used to separate left and right channels between speakers (Refer 5.4 Speaker Options).

To group speakers, press "+" next to the device name, and select the devices you want to group then press 'Done'. To ungroup the speakers, press '+' next the grouped device name, and unselect the device you want to ungrouped then press 'Done'.

5.4 Speaker's Options (Wi-Fi Connection Only)

You can change your speaker's settings under the Devices.

 
1. Press  to see available options.
2. Press 'Rename' to change the name of the speaker. Select one available name, then press 'Finish' to confirm or press '<' to cancel. You can also customize the speaker's name by selecting 'Custom...'.
 - Enable 'Hide SSID' to hide the WS350's Wi-Fi.
 - Select 'Restore Factory Settings' to reset the WS350's Wi-Fi setting.
3. Press 'Speaker info' to see the detailed information.

Tip: Press <L>, <R> or <LR> to change the channel between left, right and stereo for the selected speaker.

5.5 Music Player (Wi-Fi connection Only)

In solo mode, multiple speakers can play different tracks. In multi mode, all speakers within the network will play the same track as the main speaker.

To select a music source:

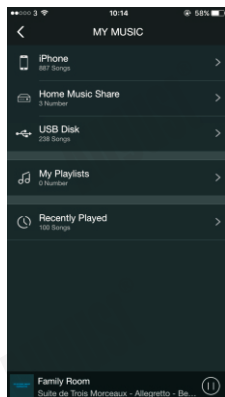

Tip: Different music sources can be accessed from any screen of the app by sliding the screen towards the right.

5.5.1 Local Music

 
- Press the music icon under the Devices.
- Press 'My Music' to search for local music.
- Press the device icon to view all the tracks on the device and select one to play.
- User 'Song', press to see more options.
- Press 'Search' to search local music.

5.5.2 Third party Music Providers

- Press 'music services' to change the list of music providers.
- Press the icon of a third party music provider to see its options or open the application.

Tip: For albums / stations, select one of them and press to save it to PRESET. You can access preset albums / stations from 'Preset Content' in the speaker's settings. You can use the preset button on the WS350 to access to the preset station without using the app.




Note: Some third party applications need Air Play and can only be used with iOS.

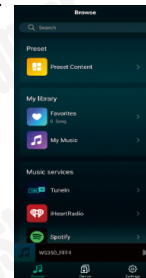

5.5.3 Presets

The three preset buttons P1, P2 and P3 can be allocated a quick play in order to access it without the app.

   Whilst browsing albums or radio stations in the app, press to save it to PRESET.

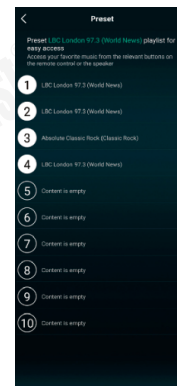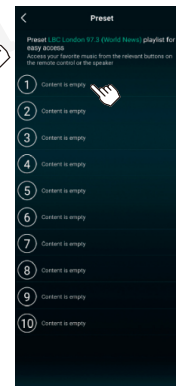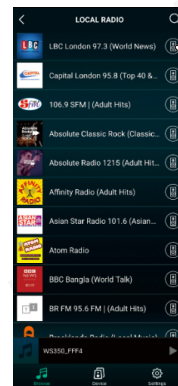


5.6 Music Control

Button	Operation	Function
⏮	Press	Previous Track
	Press and hold	Volume Down
⏸	Press	Play / Pause
⏭	Press	Next
	Press and hold	Volume Up
P1 P2 P3	Press (Wi-Fi mode only)	Access to preset station

6. Charging

Connect the speaker to a powered USB port by using the provided USB power cable.

While charging,  will light red and go off once the battery is fully charged.

7. Troubleshooting

Problems	Solutions
Unable to switch on	<ul style="list-style-type: none">• Fully charge the Speaker• Switch speaker on
Unable to connect to the speaker via Wi-Fi	<ul style="list-style-type: none">• Ensure the Wi-Fi environment is 2.4 GHz• Ensure the speaker is in Wi-Fi mode• Ensure that both your device and the speaker are in the same network.• To add a new speaker, please refer to section 5.1.• Press and Hold RESET on the speaker to reset to factory setting, then try again.
Unable to pair my Bluetooth source device	<ul style="list-style-type: none">• Confirm that the speaker is in pairing mode.• Confirm that the speaker is within 10m of the source device• Delete existing connection to speaker from source device and repair.• Press and hold the multi-function button for 2 seconds
Can't install the Bluetooth driver for the speaker on a computer	<ul style="list-style-type: none">• For Windows 7 and 8, update the Bluetooth driver from the Bluetooth module manufacturer's website. For further information on you PCs Bluetooth module, please consult your PC supplier.• Bluetooth speaker are not supported by Windows XP and Vista, a third party Bluetooth driver can be used to solve this issue.
There is no sound from my Bluetooth audio device	<ul style="list-style-type: none">• Make sure the Bluetooth audio device is connecting to the speaker via Bluetooth.• Check the volume on both source device and your audio device.
No sound or intermittent sound in Wi-Fi mode.	<ul style="list-style-type: none">• Ensure the Wi-Fi strength is good• Reduce the audio quality in the app• Reduce the usage of the router

8. Specification

Wi-Fi Band	2.4G
Wi-Fi Profile	802.11b/g/n
Bluetooth Version	v4.0
Bluetooth Distance	10m
Transmission Frequency	2.40GHz-2.48GHz
Support Profile	A2DP, AVRCP
Speaker Output	15W x 2
Frequency Response	70Hz-20KHz
Signal and Noise Ratio(SNR)	≥75dB
Battery Type	Li-ion Battery 7.4V 4400mAh
Working Time(Wi-Fi)	about 13H
Working Time(AUX / BT)	about 15H
Charging Time	about 8H
Charging Port	Micro USB
Charging Voltage	5V
Charging Current	1.5A
Dimensions	210x118x123mm
Net Weight	1395g
Alink app	iOS 9.0 +/Android 5.0 +

9. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance with the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty covers only the main units and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturer disclaims any liability for incidental or consequential damages.
- Please consult one of our customer service advisers before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>

