

August[®]

User Manual

LP230



August International Ltd
United Kingdom
Tel: +44 (0) 845 250 0586
www.augustint.com

- EN Wireless Presenter for Computer
- FR Télécommande de Présentation Sans-fil avec Pointeur Laser
- DE Schnurloser Presenter mit Laserpointer
- IT Telecomando Senza Fili per Presentazioni con Puntatore Laser
- ES Mando Inalámbrico para Presentaciones con Puntero Láser

User Manual

Thank you for purchasing the August LP230 Wireless Presenter for Computer. This user manual is designed to familiarise you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

Safety

To ensure the safety of you and others, please read the Safety Instructions before using this device. Please do not disassemble the product, it can be unsafe and will invalidate the manufacturer's warranty.

Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environmental agency and any other relevant authorities for current disposal regulations.

Declaration of Conformity







The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

Customer Service

You can contact us by phone on: +44 (0)845 250 0586 or by email at: service@augustint.com should you require further technical support or customer service.



1. Safety Instructions

■ Storage and Use

	Keep this machine away from hot or cold places. Working temperature of this device is 0°C - 50°C, storage temperature is -10°C - 60°C.		Keep the Receiver away from water or damp environment.
	Never expose the receiver to moisture, dust or smoke.		Avoid dropping or exposing to impacts.
	Never put this machine in containers that are unstable as this may cause damage.		Never extrude or chafe this machine with sharp objects.

■ Maintenance

Please unplug all connection wires before cleaning this machine.

	Please wipe this machine and buttons with a soft cloth. Only clean the screen with professional LCD TV screen cleanser.		Never wipe this machine with an abrasive cloth, detergent powder, alcohol and benzene etc, various propellants or chemical cleaning products.
---	---	---	---

■ Warning

1. Laser radiation
2. Class 2 laser product
3. Do not view directly with optical instruments
4. Do not point at people and animals
5. Please keep out of reach of children

2. Main Features

- Plug and Play for Computer Power Point Presentation
- Wireless Remote Page Changer and Shortcut Keys
- Internal Storage for USB Signal Receiver
- Integrated Red Laser Pointer (<1mW)

3. Box contents



LP230



Carry case




USB Power Cable



User Manual

4. Part Names and Functions

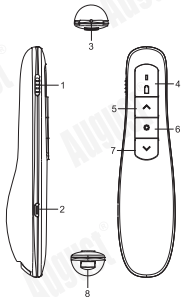

1. Power Switch
2. USB Power Port
3. Laser Pointer
4. Status LED
5. Page Up – Press and Hold to Start / End Slideshow
6. Laser
7. Page Down – Press and Hold for Black Screen
8. USB Receiver

5. Operations

5.1 Windows Installation

Plug the USB receiver into one of your computer's USB ports. The system will automatically detect the new hardware and install the necessary drivers.

The wireless presenter will then be ready to use.

Note:

In the event that your system fails to install the drivers, disable Windows Firewall. Once disabled, go to the Device Manager and launch an automatic driver update.

5.2 MAC Installation

Plug the USB receiver into one of your computer's USB ports. The system will automatically detect the new hardware.

The Keyboard Setup Assistant may appear and inform you that the keyboard cannot be identified. If so, ignore this message and click Continue.

The wireless presenter will then be ready to use.

6. Charging

This device contains a built-in Lithium rechargeable battery. While the battery is low, the Status LED light will flash quickly when any button is pressed.

To charge the device, connect the LP230 to a powered USB port using the cable provided.

While charging, the status LED will flash slowly. Once fully charged the status LED will light constantly.

A full charge takes approximately 1.5 hour.

7. Specifications

Presenter:

Technology	Radio Frequency
Frequency	2.4GHz
Control distance	Up to 60m
Laser distance	Up to 200m
Battery	3.7 V/120mAh Lithium Battery
Sleep Current	<15uA
Laser wavelength	650nm
Laser power	<1mW
Dimensions	120 x 30 x 22mm
Net Weight	27g (Excluding Receiver)

USB Receiver:

Operating system	Windows 98 / ME / 2000 / 2003 / XP / Vista / 7 / 8 / 10, Linux and Mac OS
USB version	USB 2.0 compatible with USB 1.1, USB 3.0
Power Input	4.5-5V/500mA
Dimensions	24 x 12 x 5mm
Net Weight	2g

8. Troubleshooting

Problem	Solution
The presenter does not switch on	Please ensure that the presenter is charged.
Computer fails to install drivers	<ul style="list-style-type: none">● On Windows, verify that your firewall allows automatic driver updates. Turn off firewall temporarily if necessary.● On Mac, click Continue when the Keyboard Set Assistant error message appears.
Control distance is lower than expected	<ul style="list-style-type: none">● Interference from other electronic devices can cause disruption and reduce control distance.● Low battery power can reduce the control distance. Please charge the LP230.
Does not control the software	The compatibility of the LP230 with software other than PowerPoint cannot be guaranteed

9. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main units, and does not cover the accessories.
- The warranty does not cover the damage caused by negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufactures disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.

